



Care & Maintenance Guide

Majestic

CARE & MAINTENANCE INSTRUCTIONS for MAJESTIC and REGAL LAMINATE

- * The single greatest cause of damage to any flooring or floor finish is abrasion from dirt and grit.
- * To protect the floor from dirt, grit, or sand we recommend you use doormats at entries. Vacuum mats often.
- * Ensure you use non-staining mats on the floor. Some rubber-backed and latex-backed mats may stain or damage the surface.
- * Use non-staining floor protectors under heavy furniture and equipment.
- * Chairs should have clean, smooth, non-staining floor protectors. Ensure there are no nicks or burrs on the protectors. Felt protectors must be cleaned regularly to ensure there is no grit build-up. Floor protectors should be at least 1-inch in diameter and rest flat on the floor.
- * When moving heavy furniture and equipment, use strips of plywood or Masonite to roll or slide the furniture or equipment.
- * The key to successful maintenance of all flooring types is the removal of dirt and soil. Mopping with a sponge or string mop alone removes very little soil, but rather it dissolves the dirt and spreads it out evenly across the floor creating a dull, dirty film and migration into the tile joints.
- * Flooring2 recommends the use of micro-fiber mops and pads for dust mopping and scrubbing.
- * Clean the floor regularly with a vacuum cleaner or dry mop. If necessary, the floor may be cleaned with a wet mop and a laminate cleaner. Avoid using too much water.
- * Steam mops are not recommended for use on this laminate flooring. Steam (water) is introduced into the joints of the laminate flooring increasing the potential for swelling of the core board.
- * Do not use a jet-spray microfiber mop such as a Swiffer Jet. Never use wax, polish, abrasive cleaners or scouring agents as they may dull or distort the finish. USE CAUTION: Planks are slippery when wet.
- * Do not use vacuum cleaner with rotating brushes or beater bars.